





Press **SETUP**




Select Wizard
Press > **SELECT**

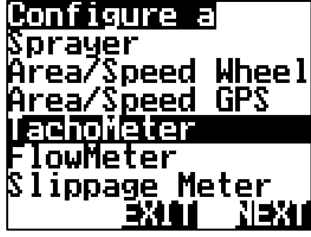


Select Tachometer
Press > **NEXT**

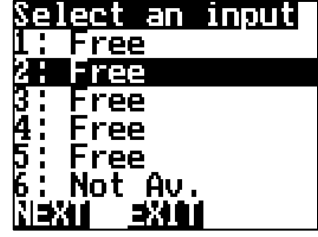


Select Input 2: Free
Press > **NEXT**

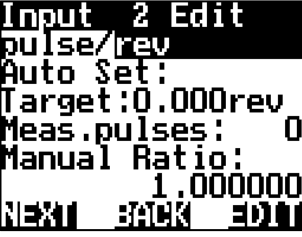

Press > **NEXT**

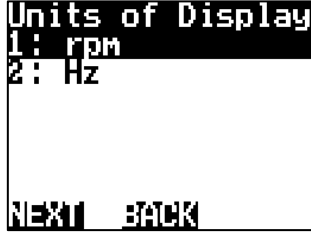

Press > **NEXT**

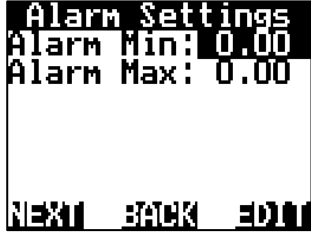


Press > **EDIT** to change the Alarm Min Value



Press the “LEFT” arrow 2 times (This will add 2 more “0” to the value.)



Using the “Up/Down/Left/Right” arrows, change the value to 250.
Press > **EXIT**

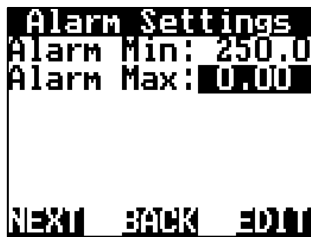


Press the “Down” arrow to highlight Alarm Max Value.
Press > **EDIT**




Press the “LEFT” arrow 3 times (This will add 2 more “0” to the value.)



Using the “Up/Down” arrows, change the value to 1000.
Press > **EXIT**

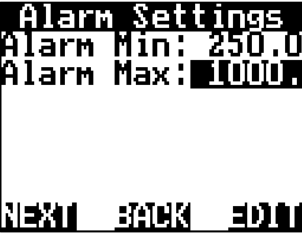

Press > **NEXT**

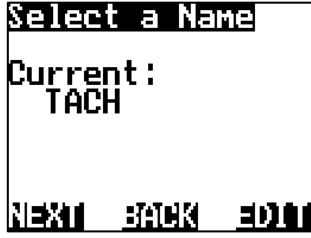

Press > **EDIT** to change the name of the Input



Using the “Up/Down/Left/Right” arrows, change the value to LH DECK.
Press > **EXIT**



Press > **NEXT**




Press > **NEXT**



Setup complete & returns to **RUN SCREEN**



This completes the Wizard Setup for:
Input 2: (LH DECK)
Repeat the procedure with the following changes
Input # 3 (RH DECK)
Input # 4 (ROLLER)

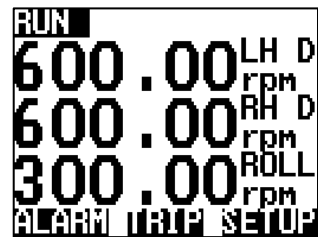

Common Questions & Answers


How do I change the decimal place values?

Press **SETUP** > Down arrow to “**Front Screen**” & press **SELECT** > “Select the line to edit” > Press **EDIT** > “Scroll down to Decimals” and use the Left/Right arrows to change the Decimal value required > Press **EXIT (3 Times)** to return to the **RUN SCREEN**

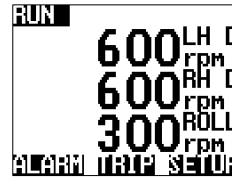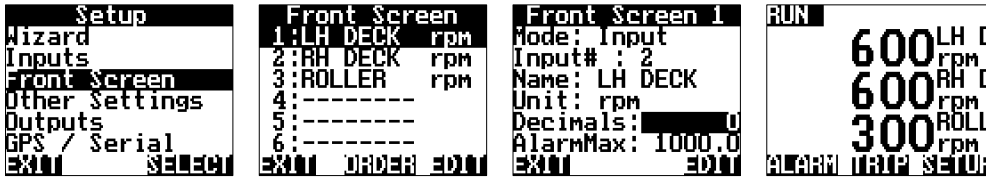


How do I edit the Alarm set points?

Press **SETUP** > Down arrow to “**Front Screen**” & press **SELECT** > “Select the line to edit” > Press **EDIT** > “Scroll down to “**AlarmMax:**” or “**AlarmMin:**” > Press **EDIT** and change the alarm points required > Press **EXIT (3 Times)** to return to the **RUN SCREEN**

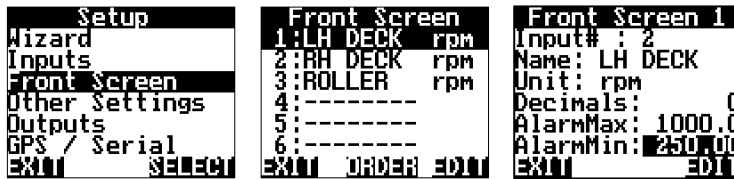


I think one of the inputs might be faulty. Can I easily change the input without doing the wizard or resetting the Jackal and losing my settings?

Press **SETUP** > Down arrow to “**Front Screen**” & press **SELECT** > “Select the line to edit” > Press **EDIT** > Down arrow “once” to “**Input#**” > Press **EDIT** or **LEFT/RIGHT** arrows and change to the new input number > Down arrow to “**Unit**” > Press **EDIT** or **LEFT/RIGHT** arrows and change to “**rpm**” > Press **EXIT (3 Times)** to return to the **RUN SCREEN**

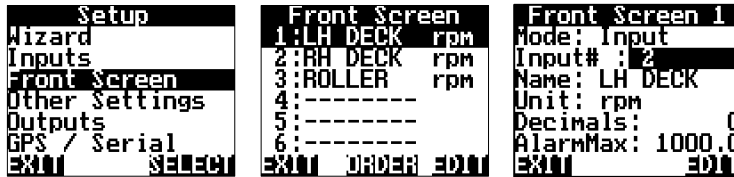

I've made a mistake during the setup. Can I start again?

Press **SETUP** > Up Arrow to “**Factory Reset**” & press **SELECT**. Confirm the Message by pressing **RESET**. Cycle power on the Jackal & start the wizard again.

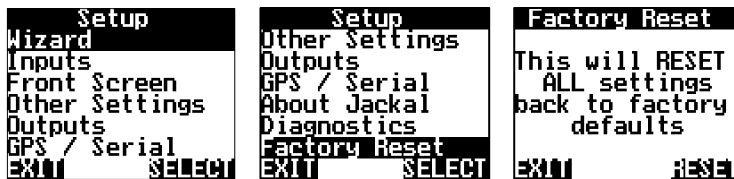

Jackal Sensor Connections – Please note the 2 versions

- 2 Wire: Reed Type Sensor with magnet – Ground & Signal
- 3 Wire: Proximity Type Sensor – Ground, Signal & Power

